INDY-CATOR-VOLT

Digital Board Voltage Display



Operating Instructions



Table of Contents

Page 3	About INDY-CATOR-VOLT
Page 4	Package content
Page 5	Instrument installation

About INDY-CATOR-VOLT

After the simple installation, the INDYCATOR-VOLT displays the current battery charge state.

The display colour can be selected freely and adjusts perfectly to the vehicle's instrument lighting.

Package content

- 1 Display instrument with power supply cable (1x)
- 2 Threaded ring (1x)
- 3 Cable terminal clamp (2x)



Figure 1

Instrument installation

1.1.1

At assembly in a universal instrument carrier: Attach instrument in the instrument carrier with a threaded ring.

Please read the respective assembly instructions when using the Indy-Cator attachment set.

1.2.1

Connect red line to battery 12 V (coming from ignition). Connect black line to ground. Board voltage is displayed after ignition activation.

1.2.2

LCD colour setting:

Press button on the rear of the display and keep it pressed until the display colour is changed in steps (16 colours). Release the button when the desired display colour is reached.